
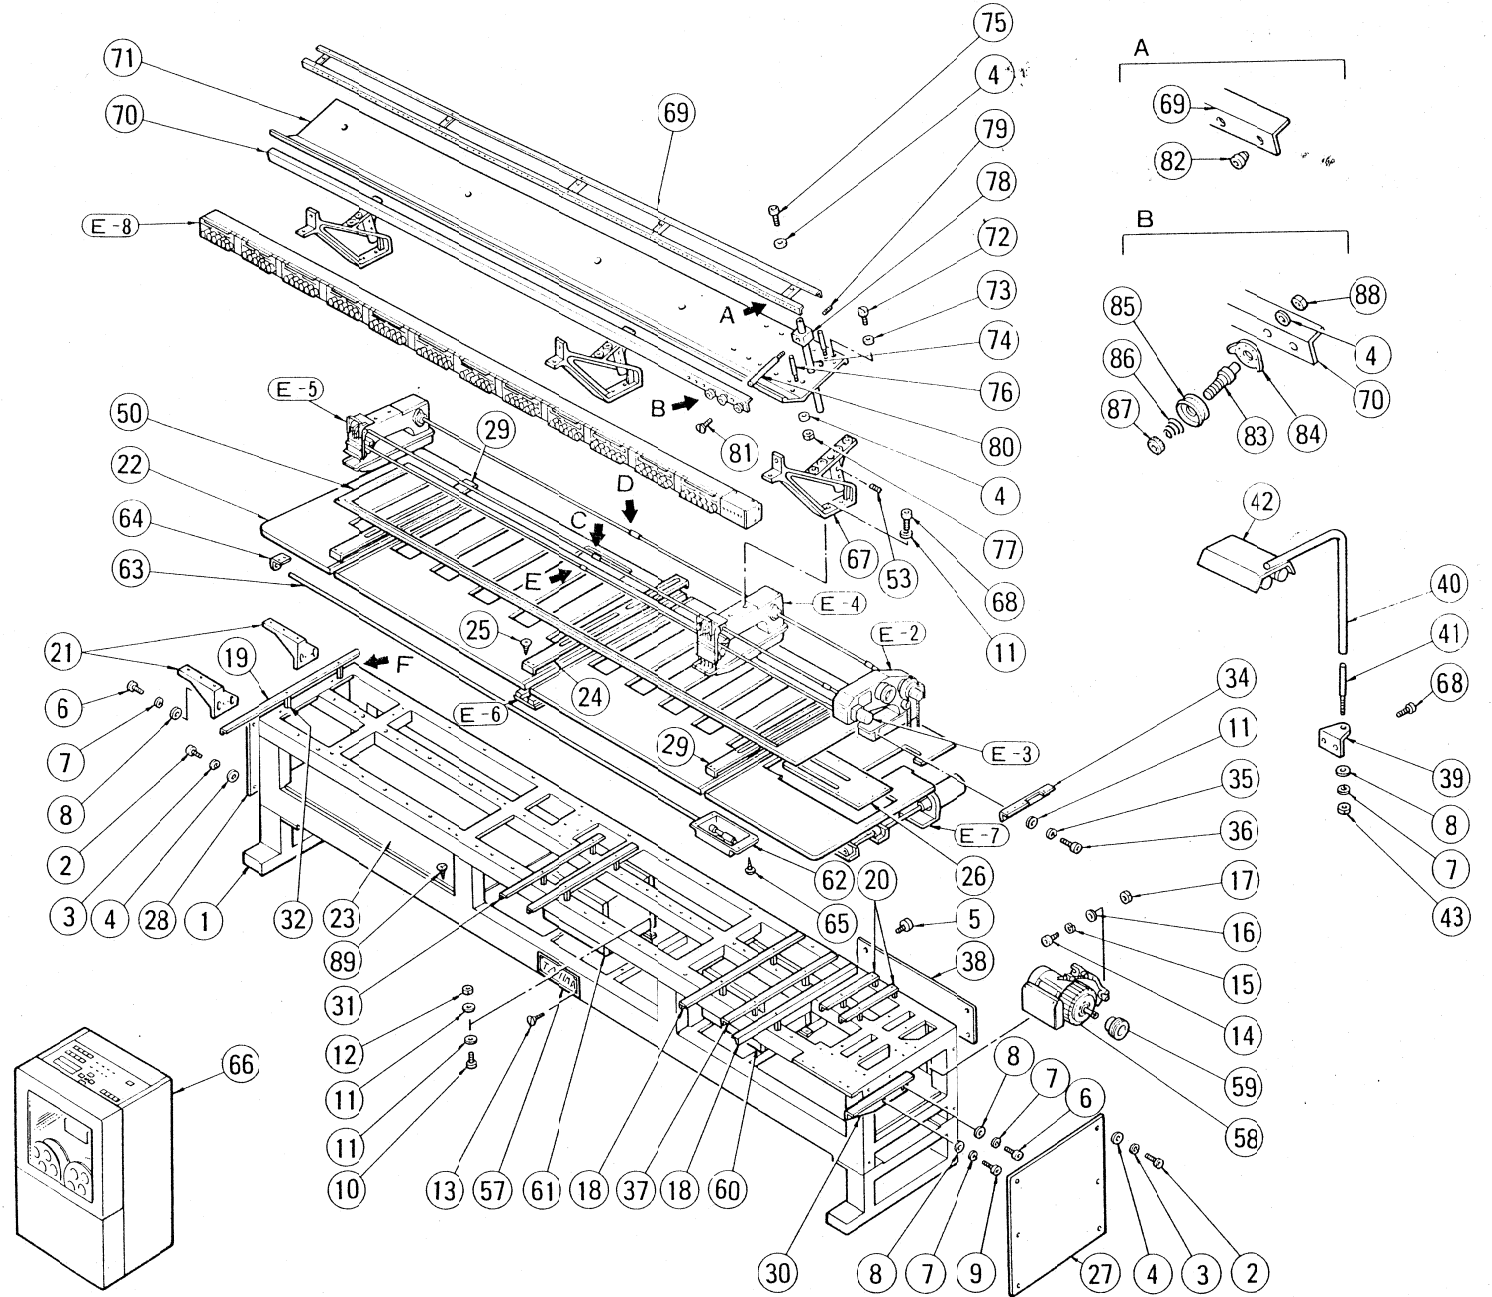
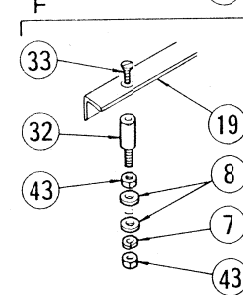
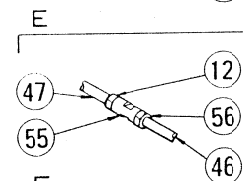
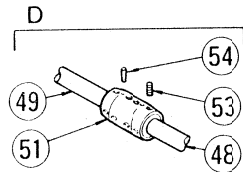


TME Type 2/3

* General View.....	E-1
* Box.....	E-2
*Color Change System.....	E-3
*Arm.....	E-4
*Needle Bar Driver System.....	E-5
*Y-Axis Frame Driver.....	E-6
*X-Axis Frame Driver.....	E-7
*Tension Base.....	E-8
*Jump.....	EF-9

TME-600 GENERAL VIEW

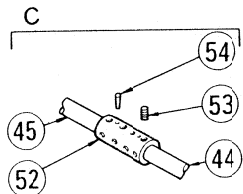

TAJIMA

S 56. 6.

TME-600 GENERAL VIEW

E-1

No.	Name		No.	Name	
E1-1	Table stand	TME-6801-12	E1-23	Plate	TME-6809-12 -12/230W -10, -08, -06
-1	Table stand	TME-6801-12/230W	-23	Plate	TME-6809-12/230W
-1	Table stand	TME-6801-10	-23	Plate	TME-6809-10
-1	Table stand	TME-6801-08	-23	Plate	TME-6809-08
-1	Table stand	TME-6801-06	-23	Plate	TME-6809-06
-2	Bolt M5×5		-24	Y-Axis guide plate No.1	TME-6810
-3	Spring washer M5		-25	Screw 3φ×5	
-4	Washer M5		-26	X-Axis guide plate No.2	TME-6811-12
-5	Screw 9/64×40×5		-26	X-Axis guide plate No.2	TME-6811-10
-6	Bolt M8×35		-26	X-Axis guide plate No.2	TME-6811-08
-7	Spring washer M8		-26	X-Axis guide plate No.2	TME-6811-06(12/230W)
-8	Washer M8		-27	Cover, side R	TME-6812
-9	Bolt M8×30		-23	Cover, side L	TME-6813
-10	Bolt M6×25		-29	Y-Axis guide plate No.3	TME-6814
-11	Washer M11		-30	No.5 table support	TME-6815
-12	Nut M6		-31	No.8 table support	TME-6816
-13	Screw M4×12		-32	Table support stud bolt	TME-6817
-14	Bolt M10×35		-33	Screw M6×12	
-15	Spring washer M10		-34	No.9 table support	
-16	Washer M10		-35	Spring washer M6	
-17	Nut M10		-36	Bolt M6×15	
-18	No.1 table support		-37	No.11 table support	
-19	No.2 table support		-38	Wirng duct cover	TME-6823-12
-20	No.3 table support		-38	Wirng duct cover	TME-6823-12/230W
-21	No.4 table support		-38	Wirng duct cover	TME-6823-10
-22	Table	TME-6808-12	-38	Wirng duct cover	TME-6823-08
-22	Table	TME-6808-12/230W	-38	Wirng duct cover	TME-6823-06
-22	Table	TME-6808-10	-39	Fluorescent lamp support braket	TME-6824
-22	Table	TME-6808-08	-40	Fluorescent lamp support pipe	TME-68-085
-22	Table	TME-6808-06	-41	Fluorescent lamp support bar	TME-68-086

TME-600 GENERAL VIEW


E-1

No.	Name		No.	Name	
E1-42	Fluorescent lamp		E1-49	Needle-bar drive shaft, L	TME-6842-08
-43	Nut M 8		-49	Needle-bar drive shaft, L	TME-6842-06
-44	Take-up lever drive shaft, R	TME-6837-12	-50	Embroidery frame (Boarder frame)	TME-6851-12
-44	Take-up lever drive shaft, R	TME-6837-12/230W	-50	Embroidery frame (Boarder frame)	TME-6851-12/230W
-44	Take-up lever drive shaft, R	TME-6837-10	-50	Embroidery frame (Boarder frame)	TME-6851-10
-44	Take-up lever drive shaft, R	TME-6837-08	-50	Embroidery frame (Boarder frame)	TME-6851-08
-44	Take-up lever drive shaft, R	TME-6837-06	-50	Embroidery frame (Boarder frame)	TME-6851-06
-45	Take-up lever drive shaft, L	TME-6838-12	-50	Embroidery frame (Frame Sash)	TME-6852-12
-45	Take-up lever drive shaft, L	TME-6838-12/230W	-50	Embroidery frame (Frame Sash)	TME-6852-12/230W
-45	Take-up lever drive shaft, L	TME-6838-10	-50	Embroidery frame (Frame Sash)	TME-6852-10
-45	Take-up lever drive shaft, L	TME-6838-08	-50	Embroidery frame (Frame Sash)	TME-6852-08
-45	Take-up lever drive shaft, L	TME-6838-06	-50	Embroidery frame (Frame Sash)	TME-6852-06
-46	Slide shaft, R	TME-6839-12	-51	Joint	TME-68-078
-46	Slide shaft, R	TME-6839-12/230W	-52	15φ Joint	TME-68-079
-46	Slide shaft, R	TME-6839-10	-53	Screw M 6 × 6	
-46	Slide shaft, R	TME-6839-08	-54	Taper pin 4 φ × 25	
-46	Slide shaft, R	TME-6839-06	-55	M 6 Joint	
-47	Slide shaft, L	TME-6840-12	-56	Nut M 6 L-h thread	
-47	Slide shaft, L	TME-6840-12/230W	-57	TAJIMA brand plate	TMBE-68-088
-47	Slide shaft, L	TME-6840-10	-58	Motor	
-47	Slide shaft, L	TME-6840-08	-59	Motor pulley	TMBE-61-018
-47	Slide shaft, L	TME-6840-06	-60	Electric box	
-48	Needle-bar drive shaft, R	TME-6841-12	-61	Drive unit	
-48	Needle-bar drive shaft, R	TME-6841-12/230W	-62	Bar switch box	
-48	Needle-bar drive shaft, R	TME-6841-10	-63	Bar switch	
-48	Needle-bar drive shaft, F	TME-6841-08	-64	Bar switch supporter	
-48	Needle-bar drive shaft, F	TME-6841-06	-65	Screw 5 φ × 15	
-49	Needle-bar drive shaft, L	TME-6842-12	-66	Control box	
-49	Needle-bar drive shaft, L	TME-6842-12/230W	-67	Tension base bracket	TMBE-6901
-49	Needle-bar drive shaft, L	TME-6842-10	-68	Bolt M 6 × 20	

TME-600 GENERAL VIEW

E-1

No.	Name		No.	Name	
E1-69	No.1 Thread guide	TME-6907-12	E1-87	No.1 Tension regulating nut	TMBE-69-058
-69	No.1 Thread guide	TME-6907-12/230W	-88	Nut 11/64×40	
-69	No.1 Thread guide	TME-6907-10	-89	Screw 5φ	
-69	No.1 Thread guide	TME-6907-08			
-69	No.1 Thread guide	TME-6907-06			
-70	No.2 Thread guide	TME-6907-12			
-70	No.2 Thread guide	TME-6907-12/230W			
-70	No.2 Thread guide	TME-6907-10			
-70	No.2 Thread guide	TME-6907-08			
-70	No.2 Thread guide	TME-6907-06			
-71	Thread stand	TME-6908-12			
-71	Thread stand	TME-6908-12/230W			
-71	Thread stand	TME-6909-10			
-71	Thread stand	TME-6909-08			
-71	Thread stand	TME-6909-06			
-72	Screw M4×10				
-73	Washer M4				
-74	Thread stand shaft	TMBE-69-002			
-75	Screw M5×3				
-76	Thread stud				
-77	Nut M5				
-78	Thread guide collar	TMBE-69-005			
-79	Screw M6×8				
-80	Thread guide stay	TMBE-69-006			
-81	Screw M5×8				
-82	Plastic thread guide	TMBE-69-060			
-83	No.1 Tention stud	TMBE-69-055			
-84	Thread guide, No.1	TMBE-69-056			
-85	No.1 Tension disk	TMBE-69-057			
-86	No.1 Tension spring	TMBE-69-059			

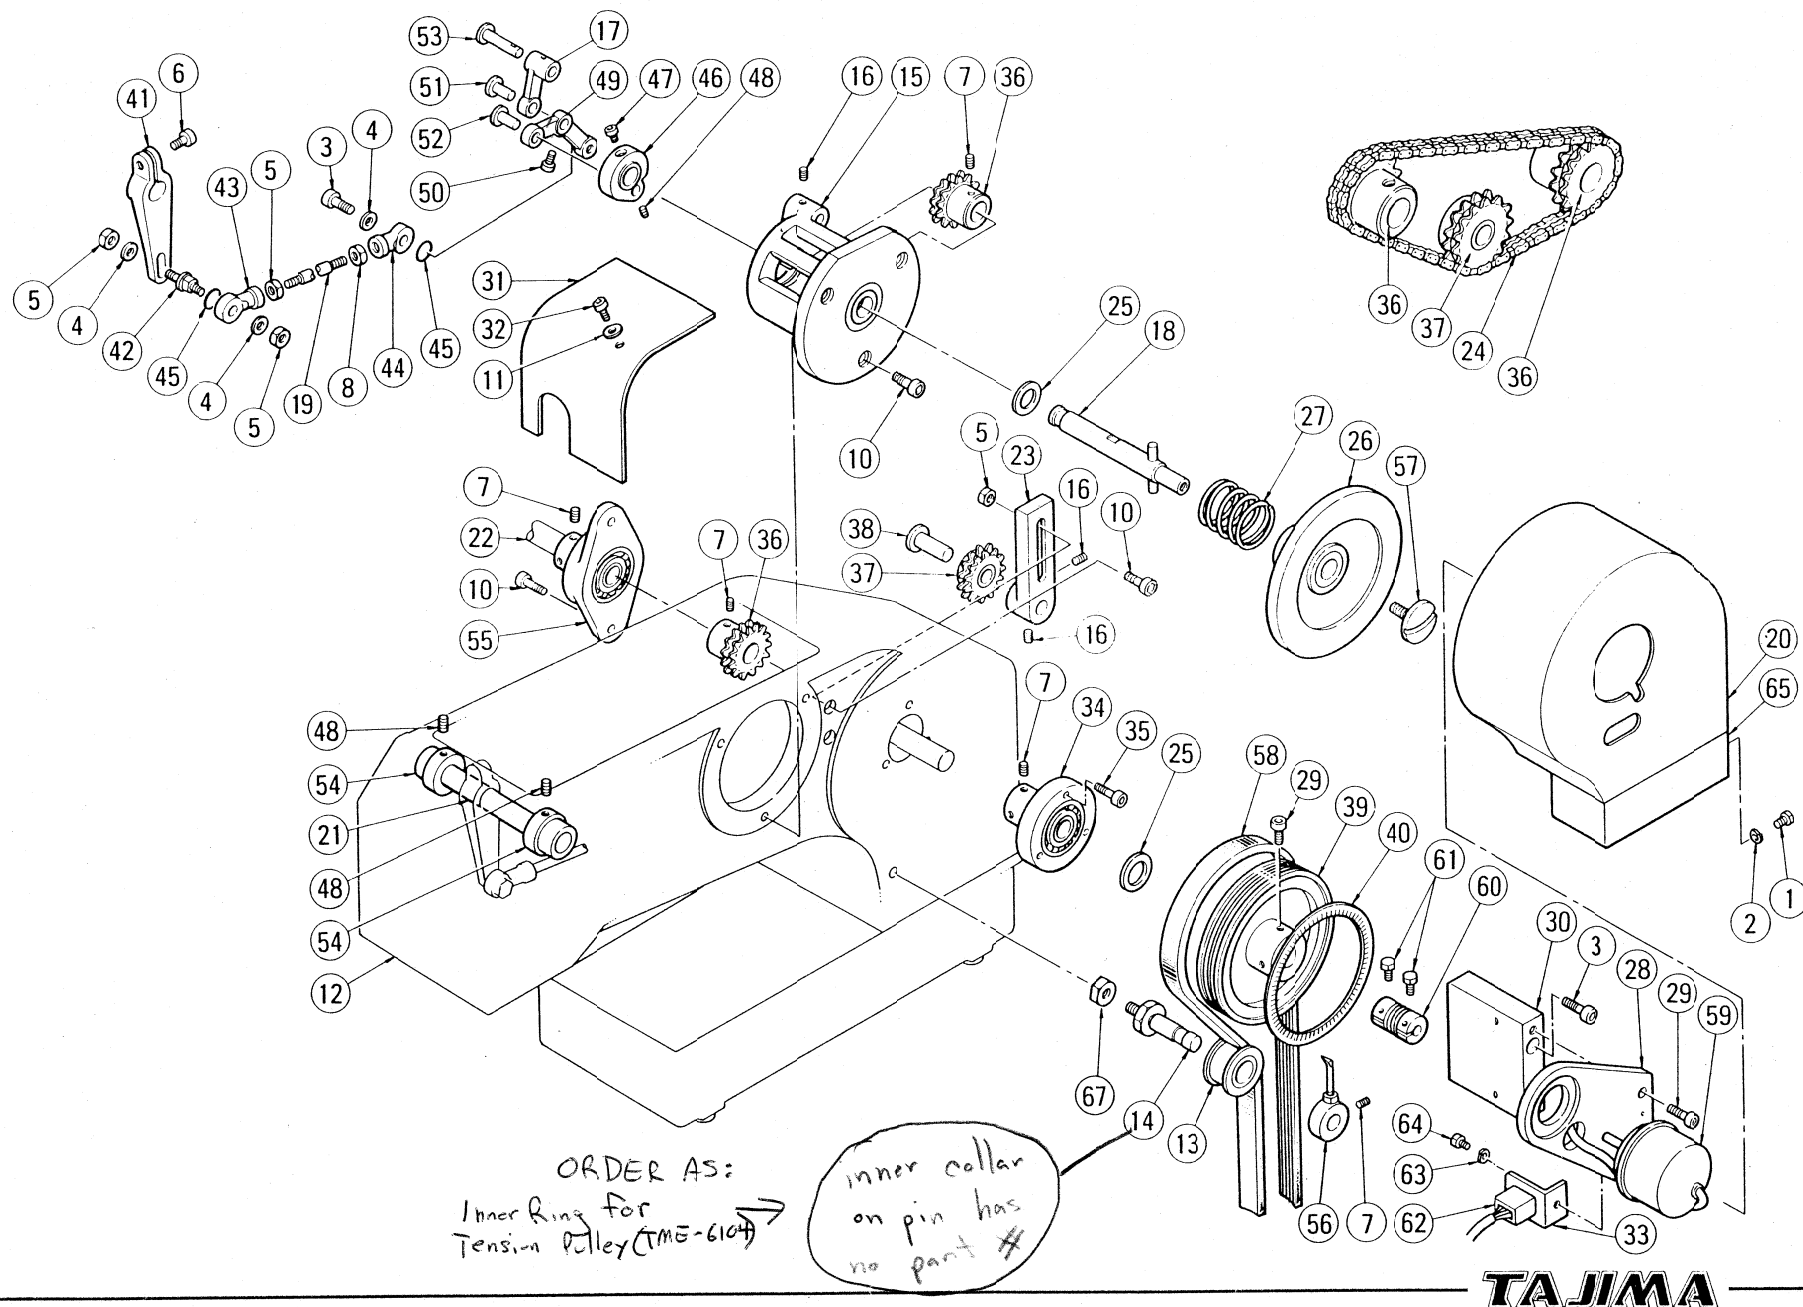

TME-600

BOX


E-2

No.	Name		No.	Name	
E2-1	Bolt M5×5		E2-31	Box inner plate	TME-6137
-2	Washer M5		-32	Screw M4×5	
-3	Bolt M6×25		-33	Connector bracket	TME-6138
-4	Washer M6		-34	No.1 Bearing	TMB-01-018
-5	Nut M6		-35	Bolt M5×15	
-6	Bolt M6×15		-36	15 ϕ Sprocket	TMBE-61-010
-7	Screw M6×6		-37	10 ϕ Sprocket	TMBE-61-011
-8	Nut M6 L-h thread		-38	Tension pin	TMBE-61-013
-9			-39	Shaft pulley	TMBE-61-017
-10	Bolt M6×20		-40	Angle indicator ring	TMBE-61-066
-11	Washer M4		-41	No.1 Take-up lever drive arm	TMBE-61-130
-12	Box	TME-6101	-42	Rod end bearing pin	
-13	Tension pulley	TME-6104 • bearing	-43	Rod end bearing R	
-14	Tension pulley pin	TME-6105	• -44	Rod end bearing L	
-15	Take-up lever bearing shaft base	TME-6106	-45	O-ring	
-16	Screw M5×8		-46	Take-up lever cam	TMBE-61-151
• -17	No.2 Take-up lever arm	TME-6107	-47	Bolt M5×10	
-18	Take-up lever base shaft	TME-6108	-48	Screw M5×5	
-19	Connecting rod	TME-6110	• -49	No.1 Take-up lever arm	TMBE-61-152
-20	Puley cover	TME-6115-1	-50	Screw 9/64×40×8	
-21	Take-up lever drive shaft	TME-6116	• -51	No.1 Arm-pin	TMBE-61-154
-22	Top main shaft	TME-6117	• -52	No.2 Arm-pin	TMBE-61-155
-23	Tension bracket	TME-6120	• -53	Take-up lever shaft	TMBE-16-120
-24	Roler chain	TME-6121	-54	Needle collar	TMBE-62-011-2
-25	15 ϕ Spacer	TME-6125	-55	Bearing	TMBE-66-081
-26	Hand-pulley	TME-6130	-56	Angle pointer	TMBE-08-012
-27	Hand-pulley spring	TME-6132	-57	Cam se: screwJ-1101	
-28	Encoder bracket	TME-6133	-58	Drive belt	
-29	Bot M6×12		-59	Rotary encoder	
-30	Encoder mounting base	TME-6134	-60	Helical coupling	

BOX

E-2

[illegible]

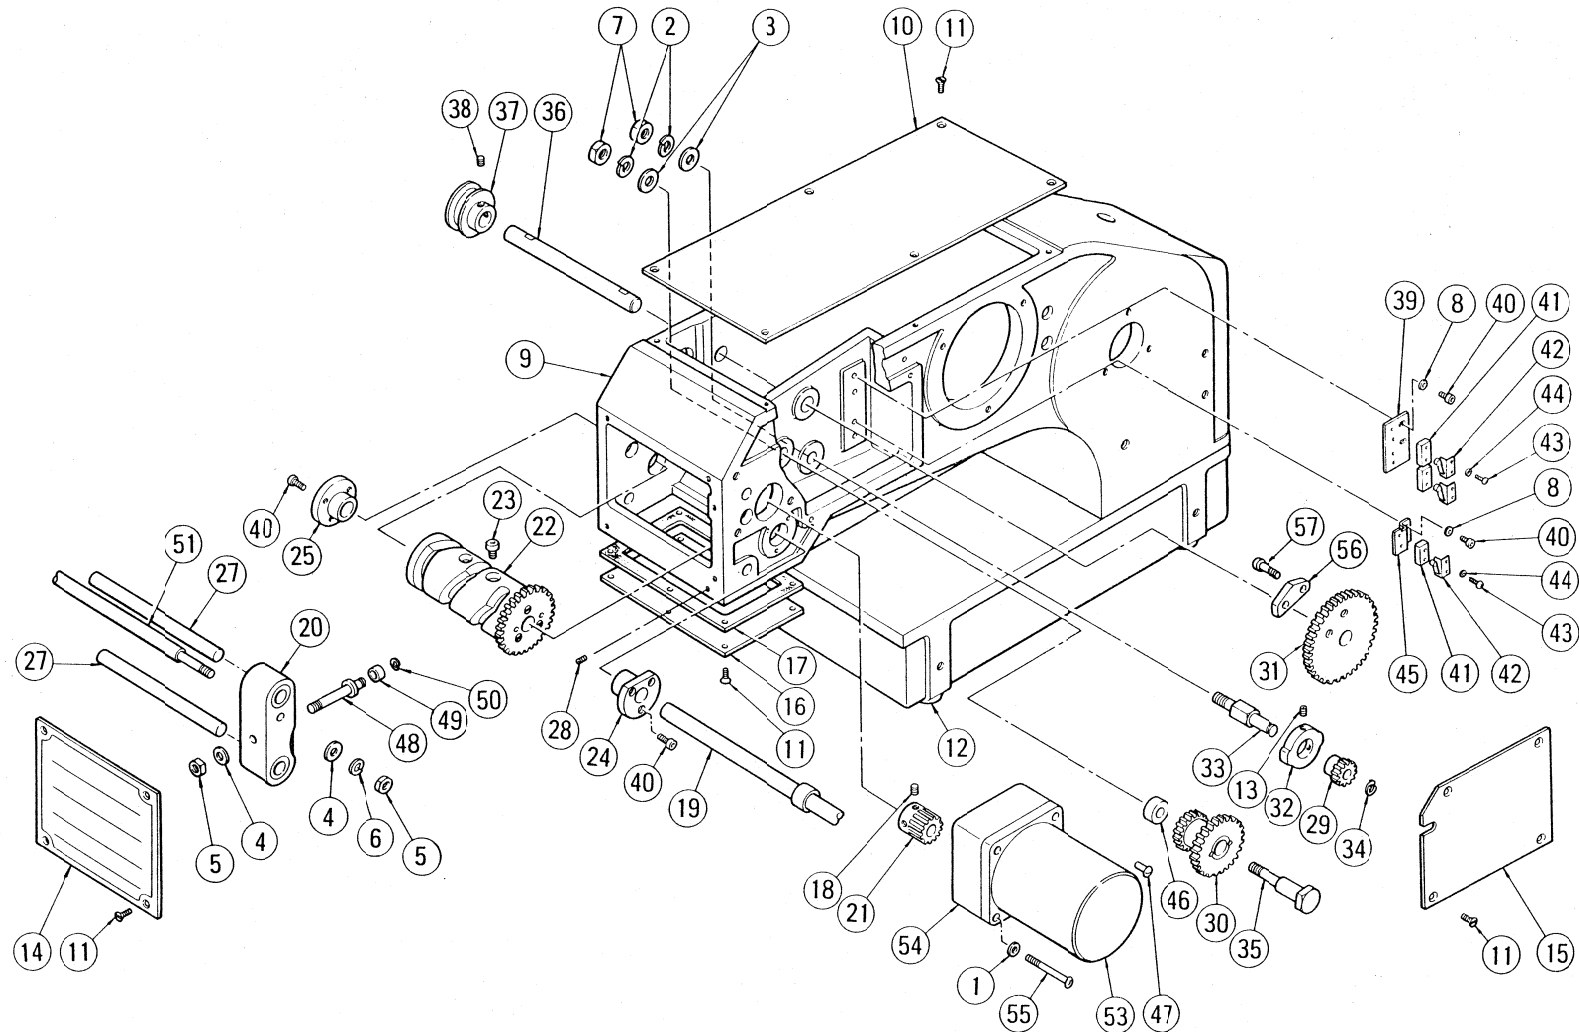


E-3

TAJIMA

TM-600 CHANGE SYSTEM

E-3


No.	Name			No.	Name		
E3-1	Washer M5			E3-31	Spur gear	TME-6424	
-2	Spring washer M8			-32	Switch collar	TME-6425	
-3	Washer M8			-33	Pinion pin	TME-6426	
-4	Washer M5			-34	E-ring E-6		
-5	Nut M6			-35	Intermediate gear pin	TME-6427	
-6	Spring washer M6			-36	Tension release shaft	TME-6428	
-7	Nut M8			-37	Tension release drive pulley	TME-6429	
-8	Washer 14			-38	Screw M4 × 5		
-9	Box	TME-6101		-39	Micro switch base	TME-6431	
-10	Box cover	TME-6102		-40	Bolt M4 × 5		
-11	Screw			-41	Micro switch		
-12	Box base	TME-6103		-42	Micro switch actuator		
-13	Screw M5 × 8			-43	Screw M2.3 × 8		
-14	Serial no plate	TME-6126		-44	Washer M2.3		
-15	Box side plate	TME-6127		-45	Switch base	TME-6432	
-16	Box bottom plate	TME-6128		-46	Intermediate gear pin spacer	TME-6433	
-17	Packing rubber	TME-6129		-47	Cap	TME-6441	
-18	Screw M5 × 5			-48	Cam pin	TMBE-64-105	
-19	Cam shaft	TME-6403		-49	Cam roller	TMBE-64-106	
-20	Slide boss	TME-6411		-50	E-ring E-3		
-21	Motor gear	TME-6412		-51	Slide shaft	TMBE-64-113	
-22	Color change cam	TME-6418		-52			
-23	Bolt M6 × 8			-53	Motor		
-24	No.1 Cam bush	TME-6419		-54	Gear box		
-25	No.2 Cam bush	TME-6420		-55	Screw M5 × 50 ISO		
-26				-56	Terminal detecting contact point	TME-6447	
-27	Guide shaft	TME-6421		-57	Bolt M3 × 10		
-28	Set screw M4 × 8						
-29	Pinion	TME-6422					
-30	Intermediate gear	TME-6423					

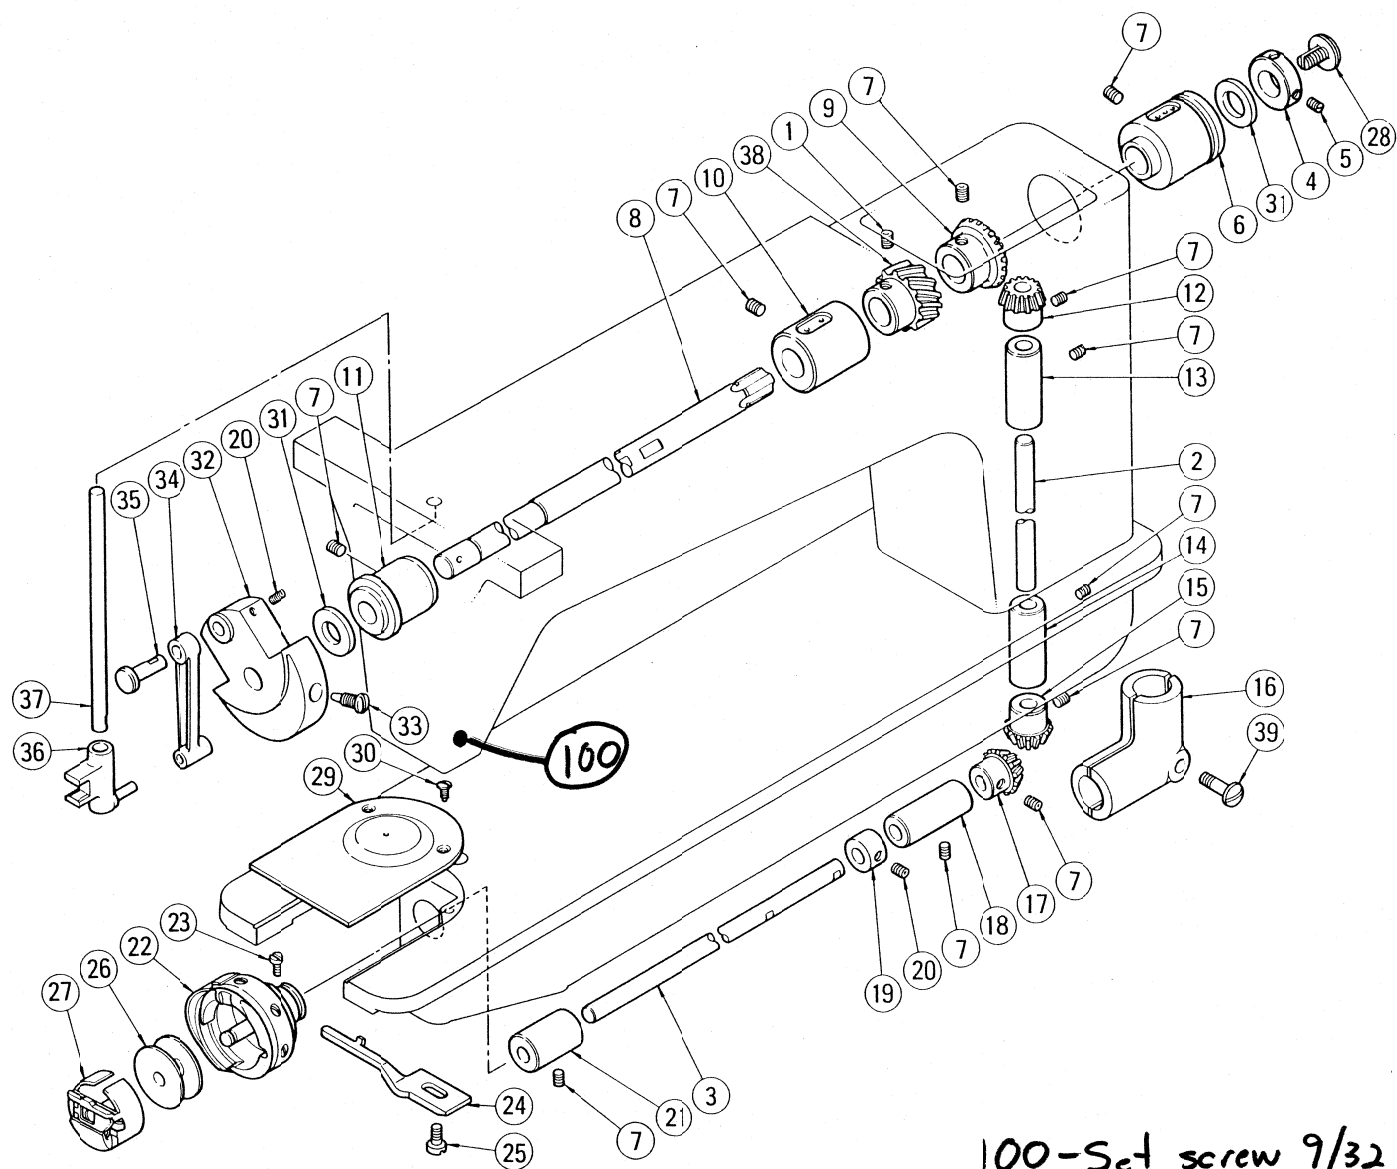

100-Set screw 9/32 x 28

TAJIMA

No.	Name			No.	Name		
E4-1	Screw M 6×6			E4-31	Spacer		
-2	Vertical shaft	TME-6604		-32	Arm shaft cam		
-3	Oscillating shaft	TME-6605		-33	Screw 9/32×28		
-4	Arm shaft collar	M1022		-34	Connecting rod • 12		
-5	Screw M 5×6			-35	Arm shaft cam pin		
-6	Arm shaft bearing, rear	M1023		-36	Needle bar driver		
-7	Screw 15/64×28×10			-37	Needle bar		
-8	Arm shaft	M1024		-38	Arm shaft gear		
-9	Arm shaft bevel gear	M1025		-39	Screw 9/32×28		
-10	Arm shaft bearing, intermediate	M1027					
-11	Arm shaft bearing, front	M1028					
-12	Vertical shaft bevel gear, upper	M1044					
-13	Vertical shaft bearing, upper	M1045					
-14	Vertical shaft bearing, lower	M1047					
-15	Vertical shaft bevel gear, lower	M1048					
-16	Gear case	M1049					
-17	Oscillating shaft bevel gear	M1050					
-18	Oscillating shaft bearing, rear	M1051					
-19	Oscillating shaft collar	M1052					
-20	Screw 1/4×40×5						
-21	Oscillating shaft bearing, front	M1054					
-22	Rotary hook	M1055					
-23	Rotary hook fixing screw M11645F						
-24	Rotary hook support	M1056					
-25	Screw 11/64×40						
-26	Bobbin	M1057					
-27	Bobbin case	M1058					
-28	Arm shaft end screw	M51617					
-29	Needle plate	M1003					
-30	Screw 11/64×40						

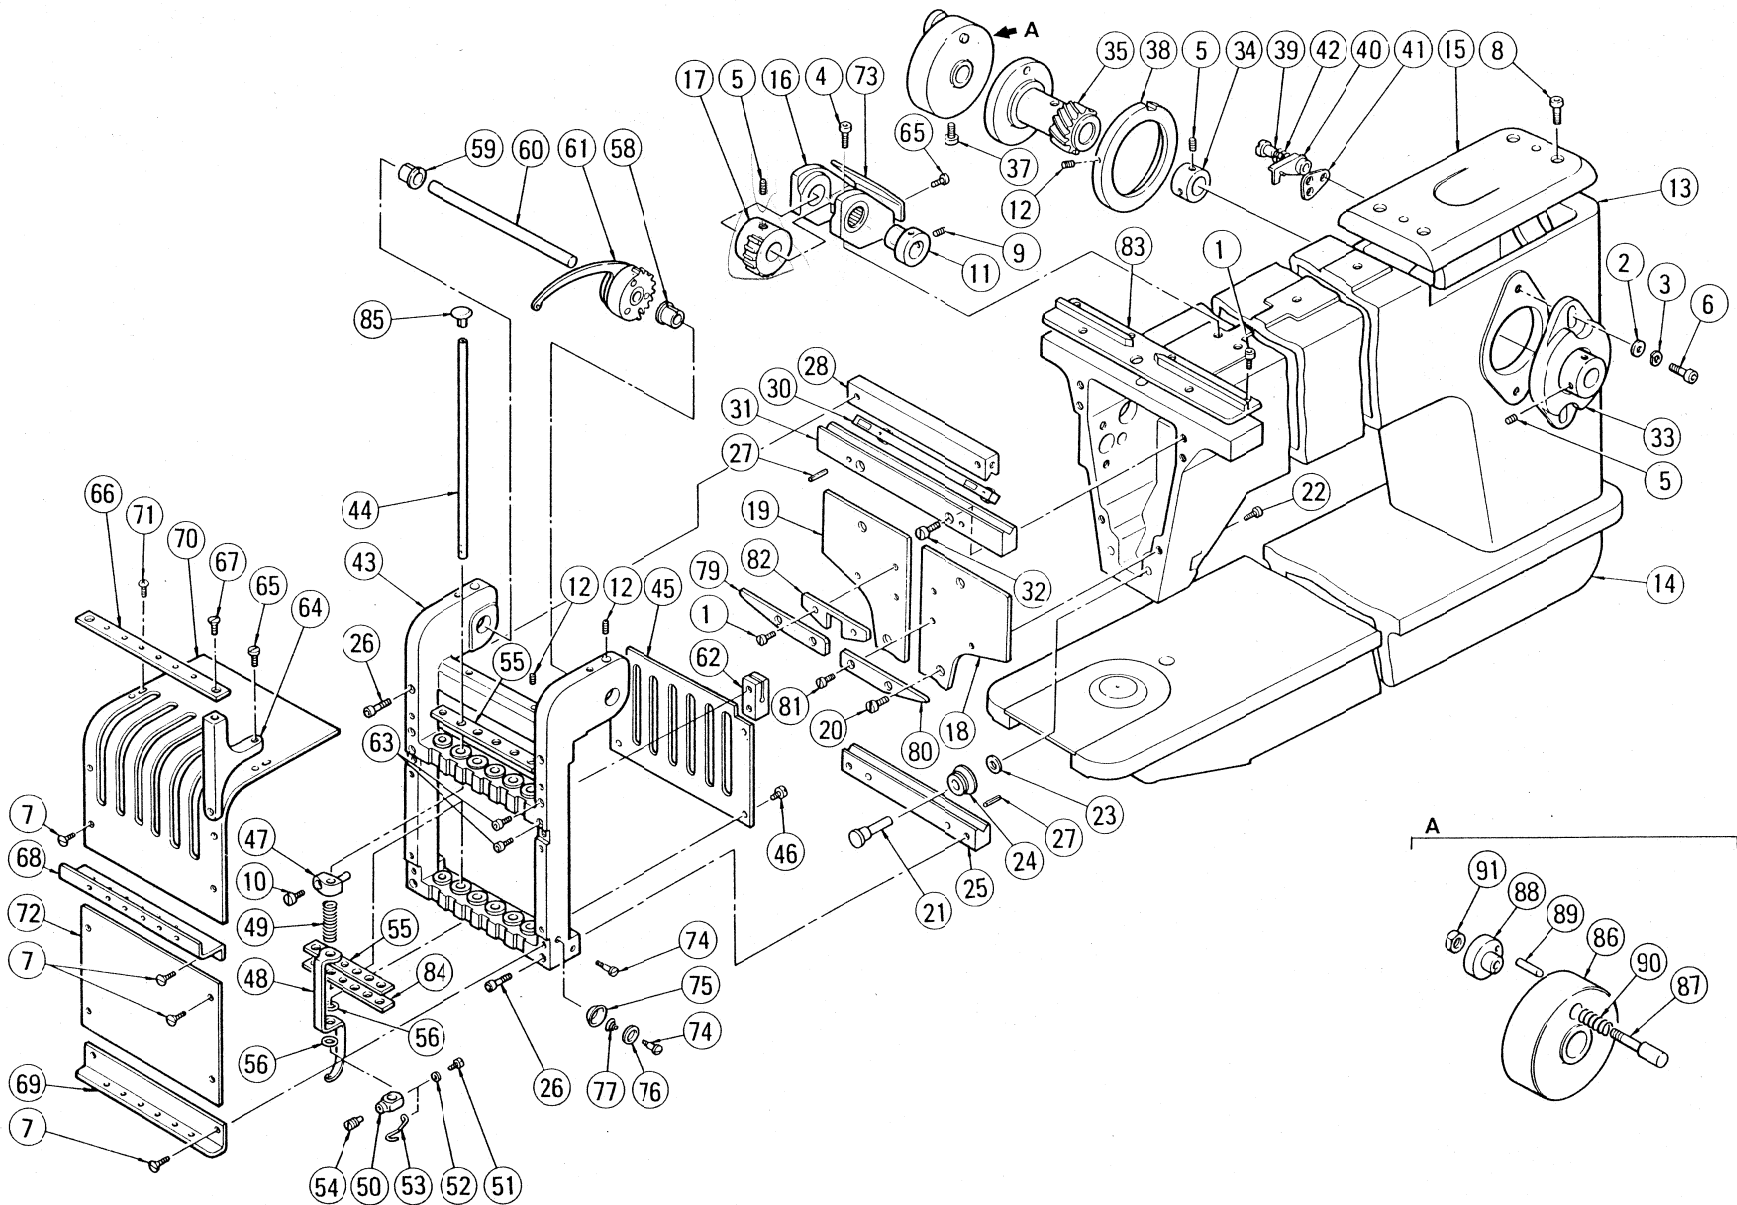

E-5

TAJIMA

TME-600 NEEDLE BAR DRIVEN SYSTEM


E-5

No.	Name		No.	Name	
E5-1	Screw 9/64×40×5		E5-31	Arm rail, upper	TMBE-66-128
-2	Washer M6		-32	Screw 11/64×40×12	
-3	Spring washer M6		-33	Bearing	TMBE-66-029 -030
-4	Bolt M6×15		-34	Gear collar	TMBE-66-032
-5	Screw M6×6		-35	Clutch base A	TMBE-66-033
-6	Bolt M6×20		-36		
-7	Screw		-37	Bolt M8×13	
-8	Bolt M5×15		-38	Clutch ring	TMBE-66-036
-9	Screw M5×5		•39	Lever pin	TMBE-66-042
-10	Screw 9/64×40×8		•40	Clutch lever	TMBE-66-043
-11	Needle collar	TMBE-62-011-2	•41	Clutch lever base	
-12	Screw M5×6		•42	Clutch lever spring	TMBE-63-208
-13	Arm	TME-6601	-43	Head	TMBE-63-145
-14	Arm bed	TME-6602	-44	Needle bar	TMBE-63-148
-15	Arm cover	TME-6603	-45	Needle bar guide rail	TMBE-66-149
-16	Take-up lever drive shaft bearing	TMBE-66-103	-46	Screw 9/64×40×10	
-17	Take-up lever gear	TMBE-66-105	-47	Needle bar connecting stud	TMBE-66-150
-18	Guide plate, R	TMBE-66-118-1	-48	Presser foot	TMBE-66-151
-19	Guide plate, L	TMBE-66-118-2	-49	Presser foot spring	TMBE-66-152
-20	Screw 11/64×40×10		-50	Needle connecting stud	TMBE-66-053
-21	Roller pin	TMBE-66-120	-51	Screw 3/32×56×3	
-22	Screw M3×18		-52	Washer M2.5	
-23	Liner plate	TMBE-66-121	-53	Thread guide	
-24	No. 1 Roller	TMBE-66-122	-54	Needle set screw	TMBE-66-054
-25	Rail, lower	TMBE-66-123	-55	Felt packing	TMBE-66-155
-26	Bolt M5×22		-56	O ring	
-27	Spring pin 3#×15		-57		
-28	Rail, upper	TMBE-66-124	-58	Take-up lever bushing	TMBE-66-159
-29			-59	Take-up lever positioner bushing	TMBE-66-160
-30	Slide roller	TMBE-66-180	-60	Take-up lever shaft	TMBE-66-161

TME-600 NEEDLE BAR DRIVER SYSTEM

E-5

No.	Name		No.	Name		
E5-61	Take-up lever	TMBE-66-162 164	E5-91	Nut M 4		
-62	Change bracket	TMBE-66-166				
-63	Bolt M 4 X 22					
-64	Thread guide bracket	TMBE-66-167				
-65	Screw M 3 X 5					
-66	Upper thread guide	TMBE-66-168				
-67	Screw M 3 X 6					
-68	Middle thread guide	TMBE-66-169				
-69	Lower thread guide	TMBE-66-170				
-70	Top cover	TMBE-66-171				
-71	Screw 9/64 X 40 X 6					
-72	Face plate	TMBE-66-172				
-73	Bearing cover	TMBE-66-173				
-74	Thread suspender screw	TMBE-66-073				
-75	Thread suspender disc	TMBE-66-074				
-76	Spring presser	TMBE-66-075				
-77	Thread suspender spring	TMBE-66-076				
-78						
-79	Needle bar stopper rail, L	TMBE-66-201-1				
-80	Needle bar stopper rail, R	TMBE-66-201-2				
-81	Screw 9/64 X 40 X 4					
-82	Needle bar guide	TMBE-66-202				
-83	Take-up lever guide	TMBE-66-163				
-84	Felt packing					
-85	Needle bar cap					
-86	Clutch base B	TMBE-66-034				
-87	Guide pin	TMBE-66-033				
-88	Knob	TMBE-66-037				
-89	Set pin	TMBE-66-040				
-90	Clutch spring	TMBE-66-039				

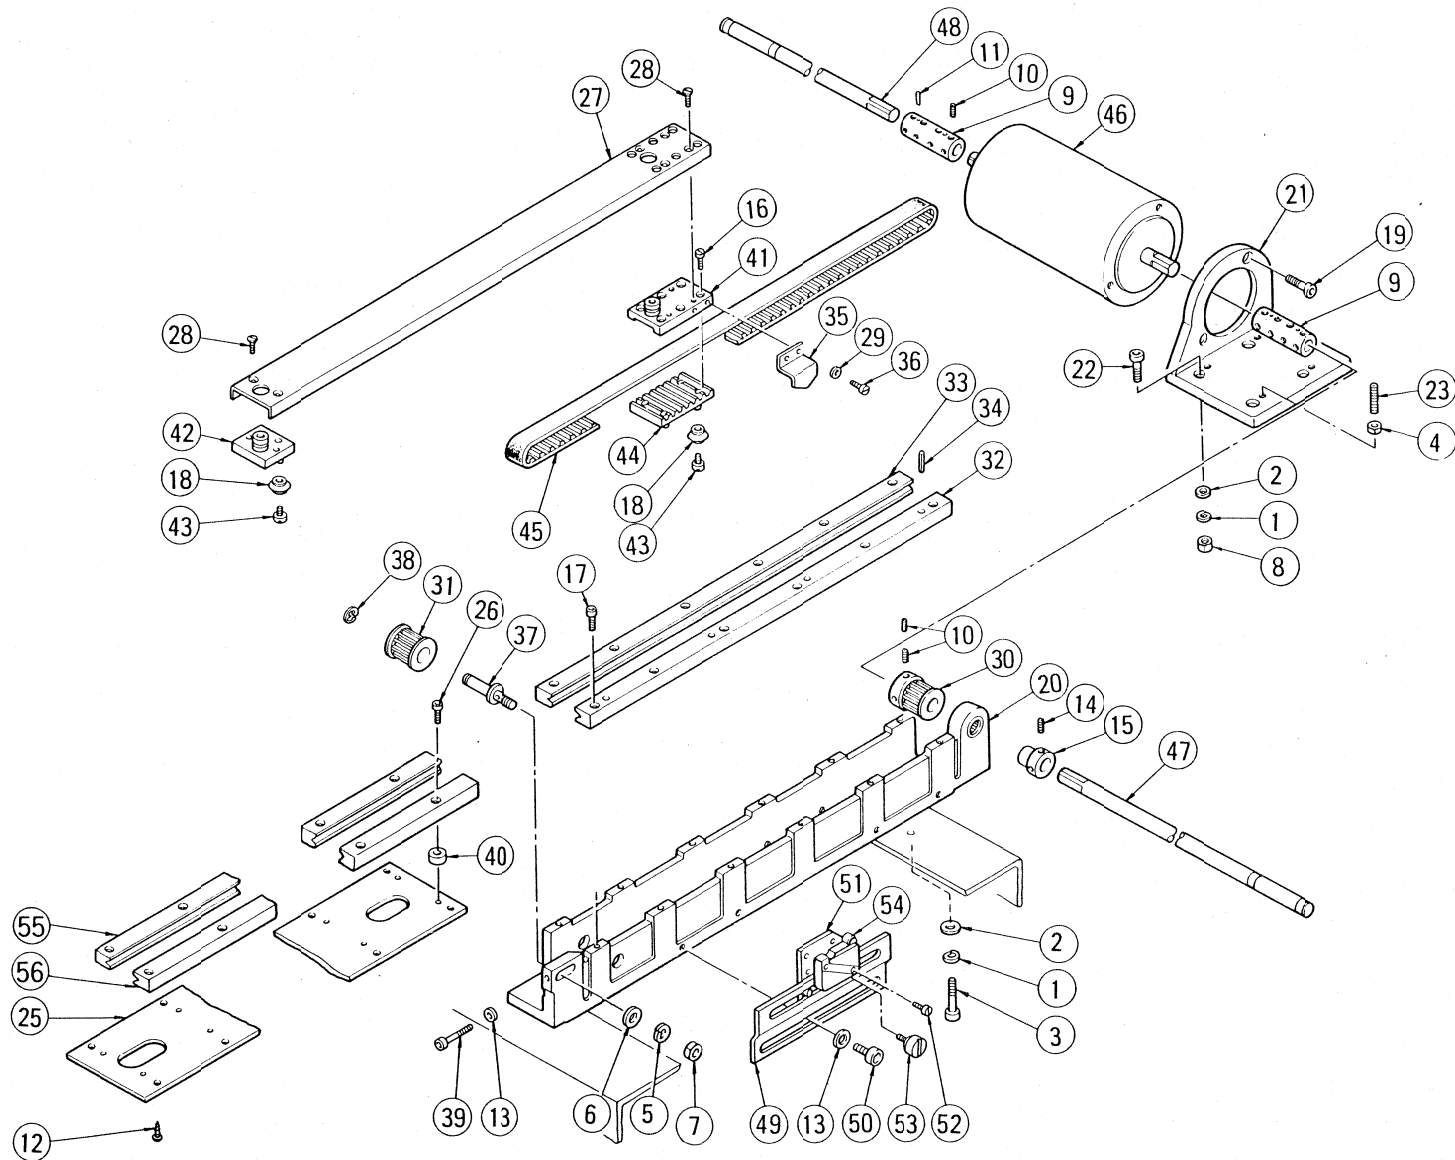

TME 600 Y-AXIS DRIVE SYSTEM

E-6

No.	Name		No.	Name	
E6-1	Spring washer M8		E6-31	Timing pulley B	TMBE-67-006
-2	Washer M8		-32	No.1 Rail(Y-axis)	TMBE-67-021
-3	Bolt M8×30		-33	No.2 Rail(Y-axis)	TMBE-67-022
-4	Nut M6		-34	Spring pin 4φ×10	
-5	Spring washer M10		-35	Y-axis safety stop bracket	TMBE-67-046
-6	Washer M10		-36	Screw M3×10	
-7	Nut M10		-37	Pulley pin	TMBE-67-050
-8	Nut M8		-38	E-ring E-10	
-9	15φ Joint	TMBE-68-079	-39	Bolt M4×35	
-10	Screw M6×6		-40	Rail spacer	TMBE-67-052
-11	Taper pin 4φ×25		-41	Y-axis frame driver(Rear)	TMBE-67-060
-12	Screw 5φ×15		-42	Y-axis frame driver(Front)	TMBE-67-061
-13	Washer M4		-43	Roller set screw	TMBE-67-051
-14	Screw M5×5		-44	Belt catcher plate	TMBE-67-062
-15	Needle collar	TMBE-62-011-2	-45	Y-axis drive belt	
-16	Screw M4×10		-46	Y-axis pulse motor	
-17	Bolt M4×10		-47	No.1 Y-axis drive shaft	TME-6833-12
-18	No.1 Roller	TMBE-66-122	-47	No.1 Y-axis drive shaft	TME-6833-12/230W
-19	Bolt M8×13		-47	No.1 Y-axis drive shaft	TME-6833-10
-20	Y-axis driver frame	TME-6701	-47	No.1 Y-axis drive shaft	TME-6833-08
-21	Motor base	TME-6703	-47	No.1 Y-axis drive shaft	TME-6833-06
-22	Bolt M8×40		-48	No.2 Y-axis drive shaft	TME-6834-12
-23	Screw M6×25		-48	No.2 Y-axis drive shaft	TME-6834-12/230W
-			-48	No.2 Y-axis drive shaft	TME-6834-10
-25	Rail holder	TME-6703	-48	No.2 Y-axis drive shaft	TME-6834-08
-26	Bolt M4×15		-48	No.2 Y-axis drive shaft	TME-6834-06
-27	Y-axis connecting plate	TME-6703	-49	Y-axis limit switch base	TME-6713
-28	Screw M4×8		-50	Bolt M4×8	
-29	Washer M3		-51	Limit switch base	TME-6716-1
-30	Timing pulley A	TMBE-67-005	-52	Screw M3×12	

TME 600 Y-AXIS DRIVE SYSTEM


E-6

[illegible]

TME 600 X-AXIS DRIVE SYSTEM

E-7

No.	Name		No.	Name		
E7-1	Spring washer M8		E7-28	X-axis driver frame(EX-460)	TMBE-6702-06 (12/230W)	
-2	Washer M8		-29	X-axis safety stop bracket	TME-6705	
-3	Bolt M8×30		-30	X-axis frame driver	TME-6706	
-4	Nut M6		-31	No.1 rail(X-axis)	TMBE-67-021	
-5	Spring washer M10		-32	No.2 rail(X-axis)	TMBE-67-022	
-6	Washer M10		-33	No.3 Frame driver pin	TMBE-67-049	
-7	Nut M10		-34	X-axis drive belt		-12
-8	Nut M8		-34	X-axis drive belt		-10
-9	Screw M6×6		-34	X-axis drive belt		-08
-10	Washer M4		-34	X-axis drive belt		-06 (12/230W)
-11	Screw M5×5		-35	X-axis pulse motor		
-12	Needle collar	TMBE-62-011-2	-36	X-axis drive shaft	TME-6832	
-13	Screw M4×10		-37	X-axis limit switch base	TME-6712	
-14	Bolt M4×10		-38	Bolt M4×8		
-15	No.1 Roller	TMBE-66-122	-39	Limit switch base	TME-6716-1	
-16	Bolt M8×15		-40	Adjusting screw	TME-6717	
-17	Motor base	TMBE-6703	-41	Screw M3×12		
-18	Bolt M8×40		-42	Limit switch		
-19	Screw M6×25		-43	15φ Joint	TMBE-68-079	
-20	Timing pulley A	TMBE-67-005				
-21	Timing pulley B	TMBE-67-006				
-22	Spring pin 4φ×10					
-23	Pulley pin	TMBE-67-050				
-24	E-ring E-10					
-25	Bolt M4×35					
-26	Roller set screw					
-27	Belt catcher plate					
-28	X-axis driver frame(EX-275)	TMBE-6702-12				
-28	X-axis driver frame(EX-325)	TMBE-6702-10				
-28	X-axis driver frame(EX-400)	TMBE-6702-08				

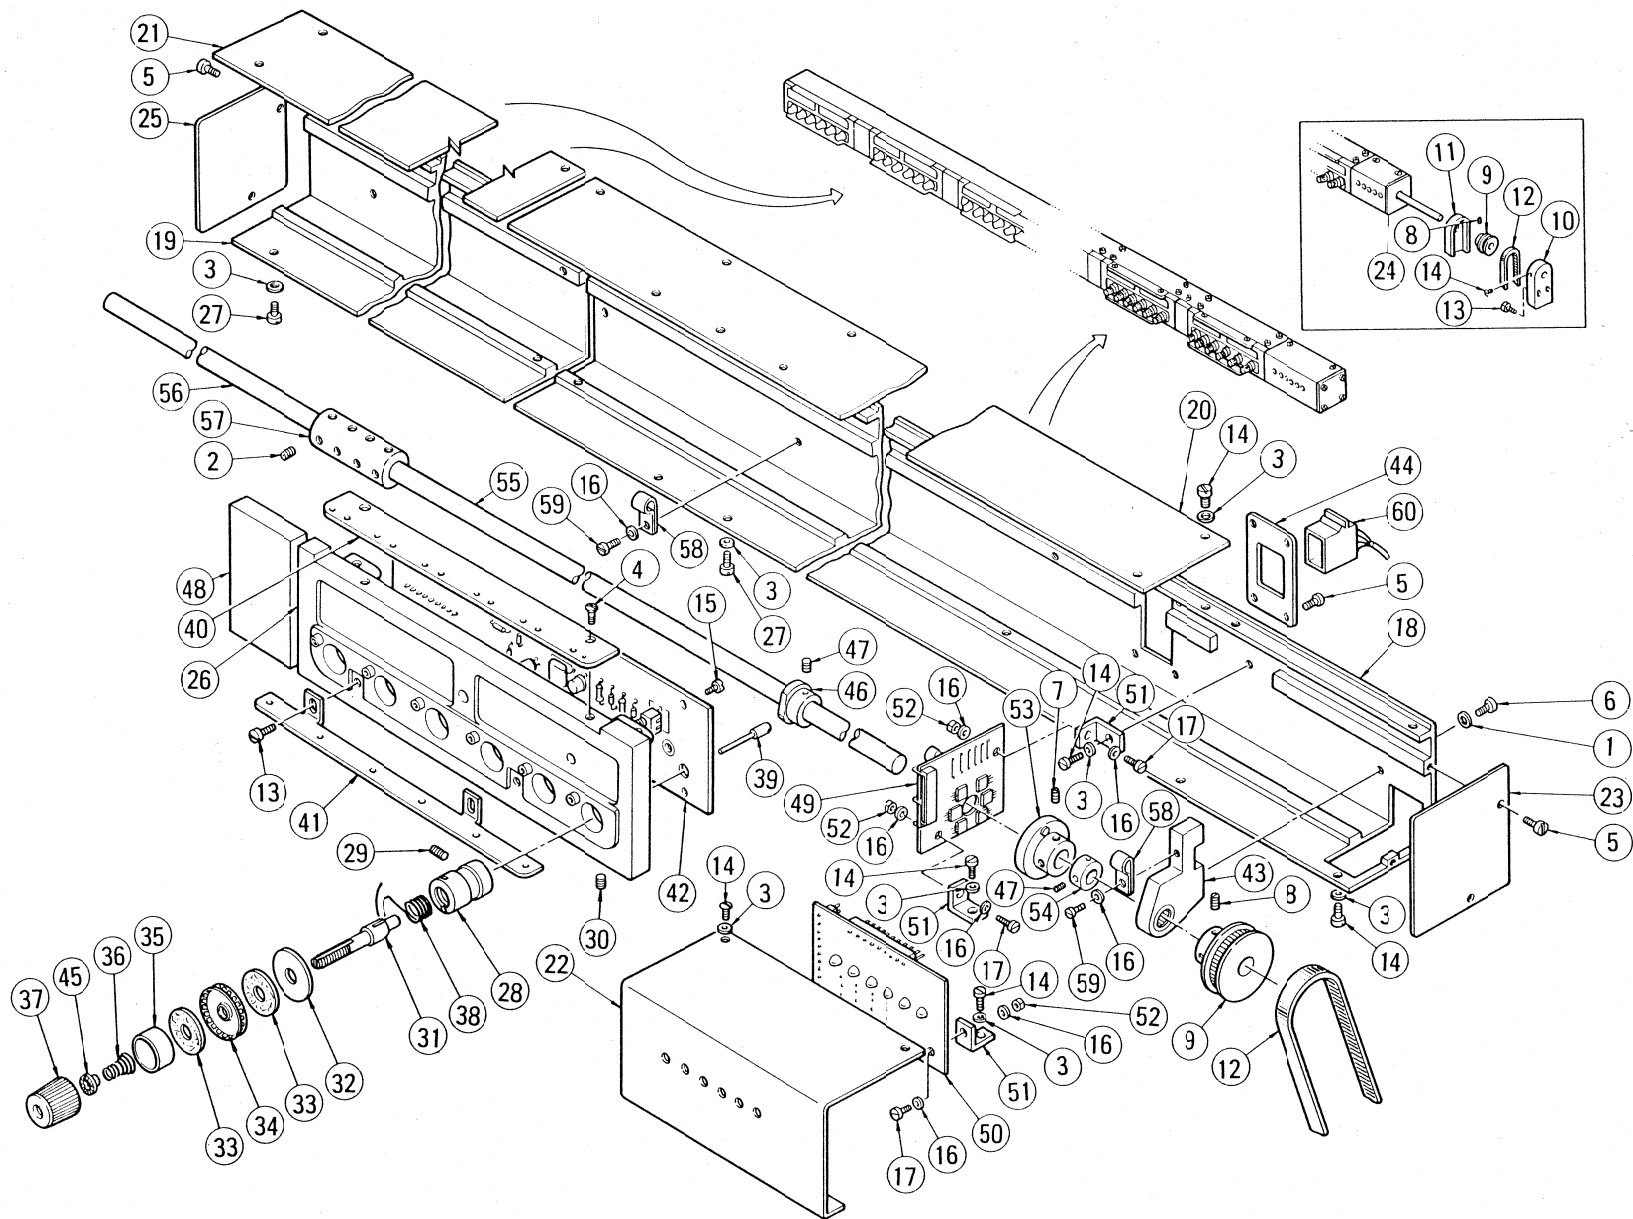

E-8

TAJIMA

T E-600 TENSION BASE

E-8


No.	Name		No.	Name	
E8-1	Washer M5		E8-20	No.1 Cover	TME-6905-08
-2	Screw M6×6		-20	No.1 Cover	TME-6905-06
-3	Washer M4		-21	No.2 Cover	TME-6906-12
-4	Screw		-21	No.2 Cover	TME-6906-10
-5	Screw M4×5		-21	No.2 Cover	TME-6906-08
-6	Bolt M4×5		-21	No.2 Cover	TME-6906-06
-7	Screw M5×10		-22	Tension base bracket cover	TME-6910
-8	Screw M4×5		-23	No.1 Tension base bracket side cover	TME-6911
-9	Tension release driver pulley	TME-6430	-24	No.2 Tension base bracket side cover	TME-6912
-10	Tension release drive bearing	TME-6438	-25	Tension base bracket side cover	TMBE-69-174
-11	Tension release pulley cover	TME-6439	-26	Tension base	TMBE-69-120
-12	Timing belt		-27	Screw 9/64×40×12	
-13	Bolt M5×12		-28	Tension holder	TMBE-69-021
-14	Screw SM 9/64×40×6		-29	Screw 9/64×40×6	
-15	Screw 9/64×40×6		-30	Screw 9/64×40×8	
-16	Washer M3		-31	Thread tension stud	TMBE-69-122
-17	Screw M3×10		-32	Insulation plate	TMBE-69-023
-18	No.1 Tension base bracket	TME-6902-12	-33	Felt packing	TMBE-69-024
-18	No.1 Tension base bracket	TME-6902-12/230W	-34	Rotary tension	TMBE-69-025
-18	No.1 Tension base bracket	TME-6902-10	-35	Tension collar	TMBE-69-026
-18	No.1 Tension base bracket	TME-6902-08	-36	Tension screw	TMBE-69-027
-18	No.1 Tension base bracket	TME-6902-06	-37	Tension regulator	TMBE-69-028
-19	No.2 Tension base bracket	TME-6903-12	-38	Tension take-up spring	TMBE-69-029
-19	No.2 Tension base bracket	TME-6903-12/230W	-39	Tension releasing pin	TMBE-69-130
-19	No.2 Tension base bracket	TME-6903-10	-40	Tension base thread guide (Upper)	TMBE-69-131
-19	No.2 Tension base bracket	TME-6903-08	-41	Tension base thread guide (Lower)	TMBE-69-132
-19	No.2 Tension base bracket	TME-6903-06	-42	PC Board	TMBE-69-133
-20	No.1 Cover	TME-6905-12	-43	Tension release shaft bearing	TMBE-69-139
-20	No.1 Cover	TME-6905-12/230W	-44	Connector base	TMBE-69-149
-20	No.1 Cover	TME-6905-10	-45	Tension spring presser	TMBE-69-054

TME-600 TENSION BASE

E-8

No.	Name			No.	Name		
E8-46	Tension release collar	TMBE-69-171					
-47	Screw M 4 X 4						
-48	Tension base cover	TMBE-69-152-12					
-48	Tension base cover	TMBE-69-152-10					
-48	Tension base cover	TMBE-69-152-08					
-48	Tension base cover	TMBE-69-152-06					
-49	PC Board(for IC)						
-50	PC Board(for LED)						
-51	PC Board bracket	TMBE-69-168					
-52	Nut M 3						
-53	Contact point boss	TMBE-69-167					
-54	10φ Collar	TMB-06-C34					
-55	Tension release shaft R	TME-6835-12					
-55	Tension release shaft R	TME-6835-12/230W					
-55	Tension release shaft R	TME-6835-10					
-55	Tension release shaft R	TME-6835-08					
-55	Tension release shaft R	TME-6835-06					
-56	Tension release shaft L	TME-6836-12					
-56	Tension release shaft L	TME-6836-12/230W					
-56	Tension release shaft L	TME-6836-10					
-56	Tension release shaft L	TME-6836-08					
-56	Tension release shaft L	TME-6836-06					
-57	10φ Joint	TMB-05-012					
-58	Cable clip						
-59	Screw M 3 X 6						
-60	Connector						

TME-600 Jump

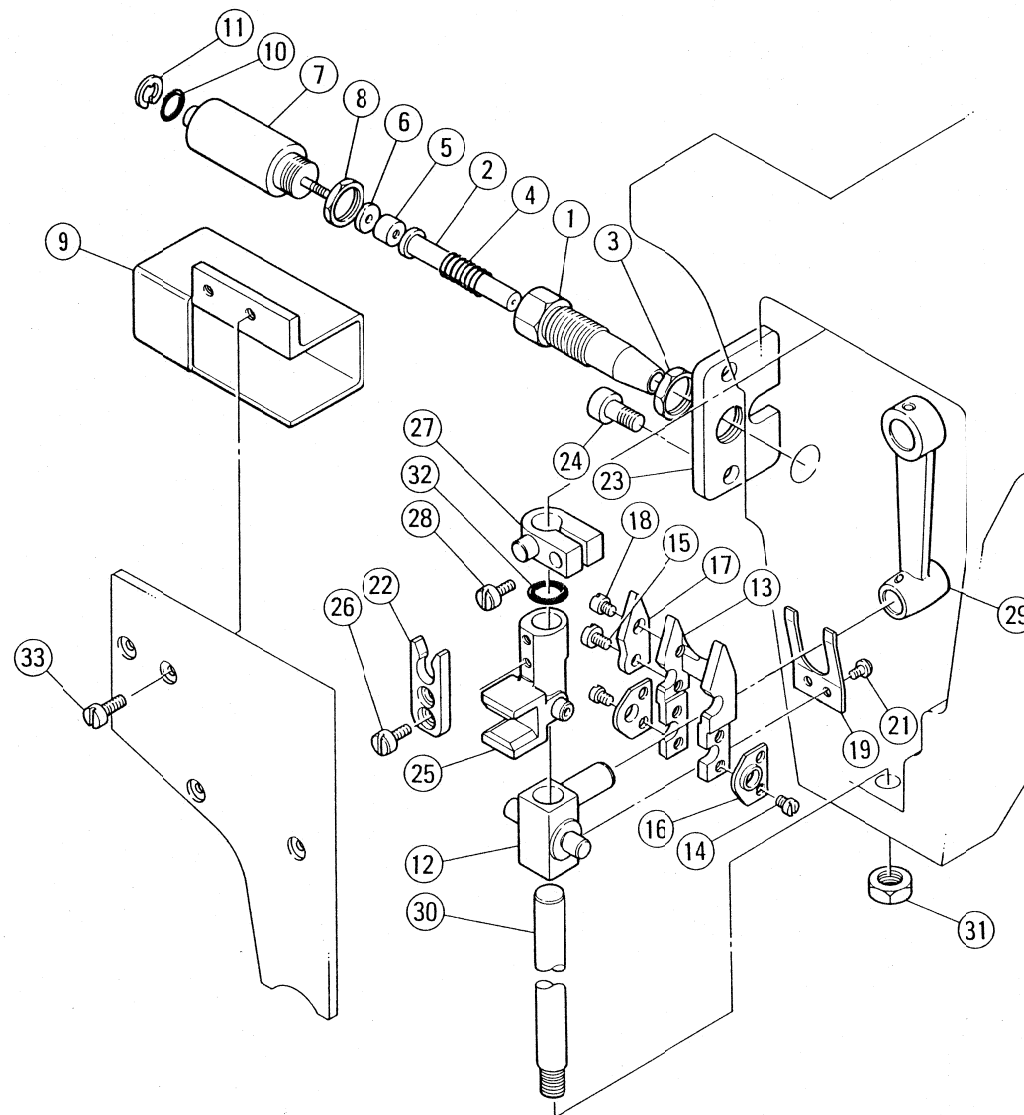

TAJIMA

TME-600 Jump

No. 1

Parts No.	Name		Parts No.	Name		Parts No.	Name	
1	Solenoid base	EJ-6001	29	Shaft plate	EJ-6103			
2	Lever knock pin	6002	30	Needle bar	6104			
3	Nut	6003	31	Nut	M6×P1.0			
4	Solenoid spring	6004	32	O-ring	7φ×1.9			
5	Solenoid stopper	6005	33	Screw	SM ₆₄ ⁹ ×40×4ℓ			
6	Packing	6006						
7	Solenoid	6007						
8	Nut	M9×P0.75						
9	Solenoid cover	6008						
10	O-ring	4.8φ×1.9						
11	E-ring	4φ						
12	Jump base	EJ-6009						
13	Jumping lever	EJ-6010						
14	Screw	SM ₈ ¹ ×44×4ℓ						
15	Screw	SM ₈ ¹ ×44×6ℓ						
16	Jump base holder plate	EJ-6011						
17	Lever plate	6012						
18	Jump plate holding pin	6013						
19	Lever spring	6014						
20								
21	Screw	M2×P0.4×4ℓ						
22	Needle bar holder	EJ-6016						
23	Bracket	6101						
24	Bolt	M4×P0.75×10						
25	Screw	EJ-6102						
26	Crank rod	SM ₈ ¹ ×44×3.5						
27	Jumping needle-bar guide	EJ-6105						
28	Screw	SM ₆₄ ⁹ ×40×11ℓ						